


Step by step to upgrade the firmware

1. Obtain the firmware (latest release can be downloaded from <http://www.dynalink.com.au>). (If the file in zip extension, you need to unzip the file)
2. Open Internet Explorer, on the address bar type 192.168.1.1
3. You will be prompted for username and password. Enter web username: admin and password: admin
4. Click [Admin] tab, Click [Local Image Upgrade] on the menu heading

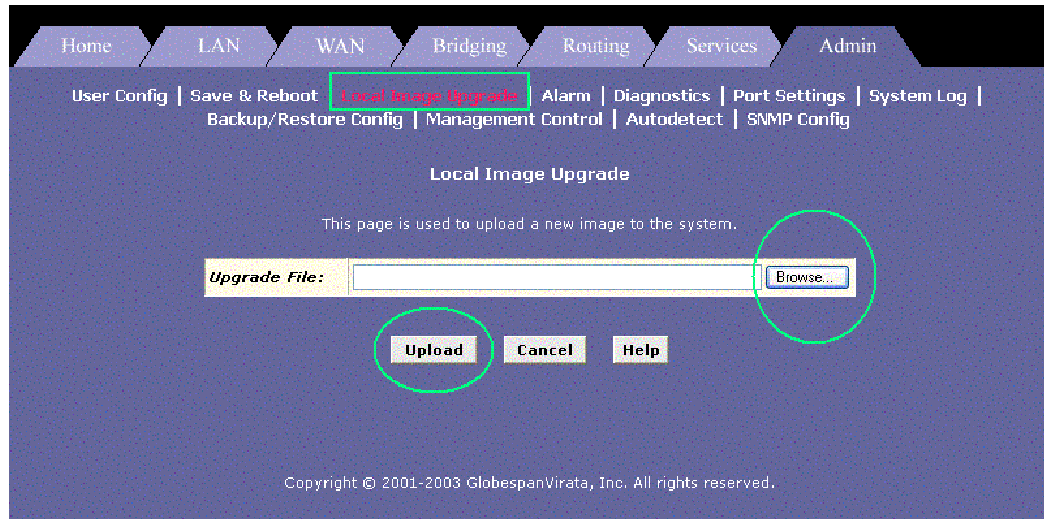

5. Click Browse to browse to the location of the firmware (TEImage.bin)
6. Click Upload, process started
7. Wait until the uploading process finishes, the modem will reboot itself
8. Refresh your Internet Explorer